



DFA-01 Wiring Guide

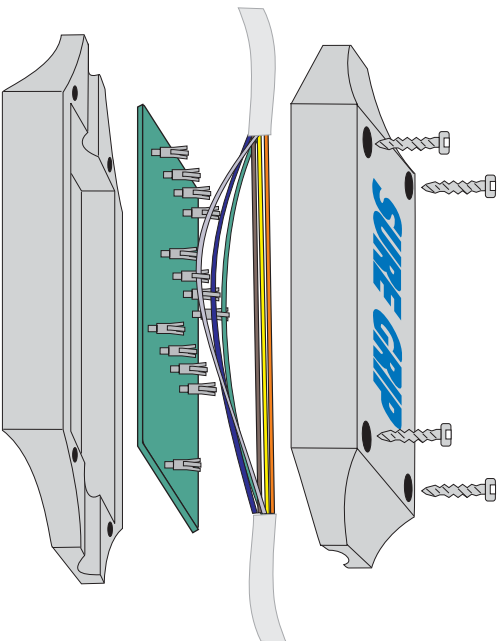


Being careful not to cut any of the wires, **remove 3"** of the outer jacket from the cable. Mark the wires with a felt pen where they will be attached to the terminal posts. Using the hand wire stripper, strip about 1/4" of insulation from the wires where they are marked. Insert the wires into the terminal posts and solder.

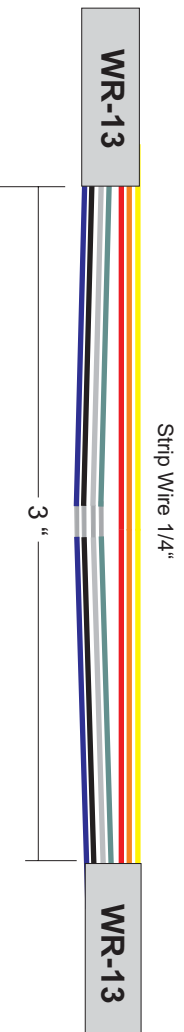

← TO TEST END


TO HANDLE →

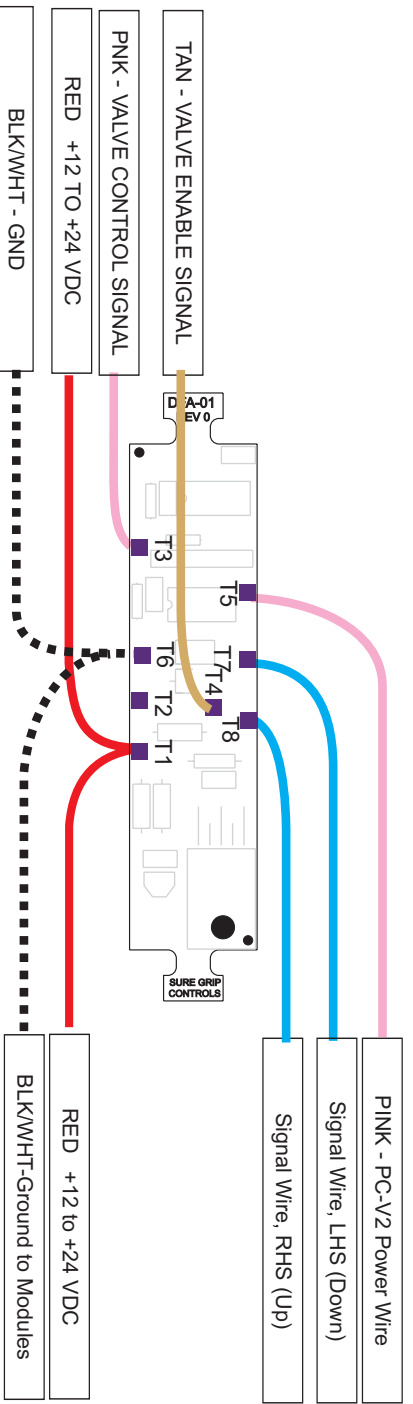

NOTES:

- the wire colours for T7 and T8 are the normal colours assigned to the switches in the positions that the PC-V2 modules are mounted in
- use a small tie-wrap at each end of the board to anchor the wires

DFA-02 Wiring Guide

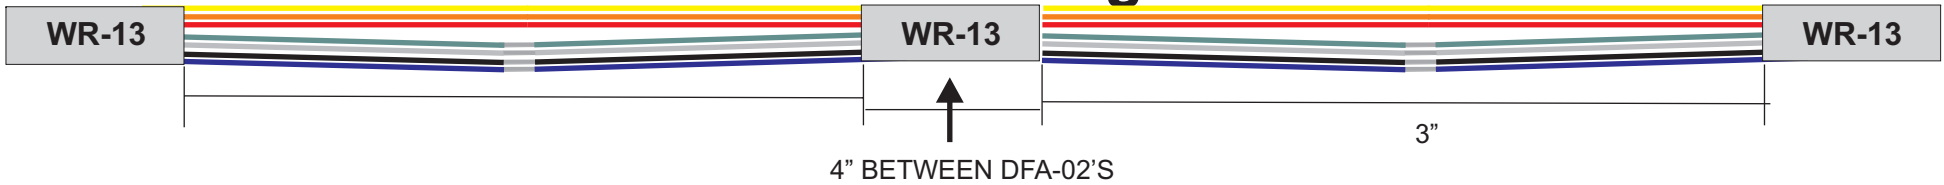

NOTES:

- the wire colours for T7 are the normal colours assigned to the X and Y axis on the joystick
- use a small tie-wrap at each end of the boards to anchor the wires

